Self Diagnosis Supported model

SERVICE MANUAL

FE-1A CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.
KV-25FX20A	RM-887	Italian	SCC-Q32B-A
KV-25FX20B	RM-887	French	SCC-Q33B-A
KV-25FX20D	RM-887	AEP	SCC-Q31B-A
KV-25FX20E	RM-887	Spanish	SCC-Q34B-A
KV-25FX20K	RM-887	OIRT	SCC-Q36C-A
KV-25FX20R	RM-887	OIRT	SCC-Q36D-A

MODEL	COMMANDER	DEST	CHASSIS NO.
KV-29FX20A	RM-887	Italian	SCC-Q32A-A
KV-29FX20B	RM-887	French	SCC-Q33A-A
KV-29FX20D	RM-887	AEP	SCC-Q31A-A
KV-29FX201D	RM-887	AEP	SCC-Q31E-A
KV-29FX20E	RM-887	Spanish	SCC-Q34A-A
KV-29FX201E	RM-887	ESP	SCC-Q34E-A
KV-29FX20K	RM-887	OIRT	SCC-Q36B-A
KV-29FX20R	RM-887	OIRT	SCC-Q36A-A
KV-29FX20U	RM-887	UK	SCC-Q35A-A

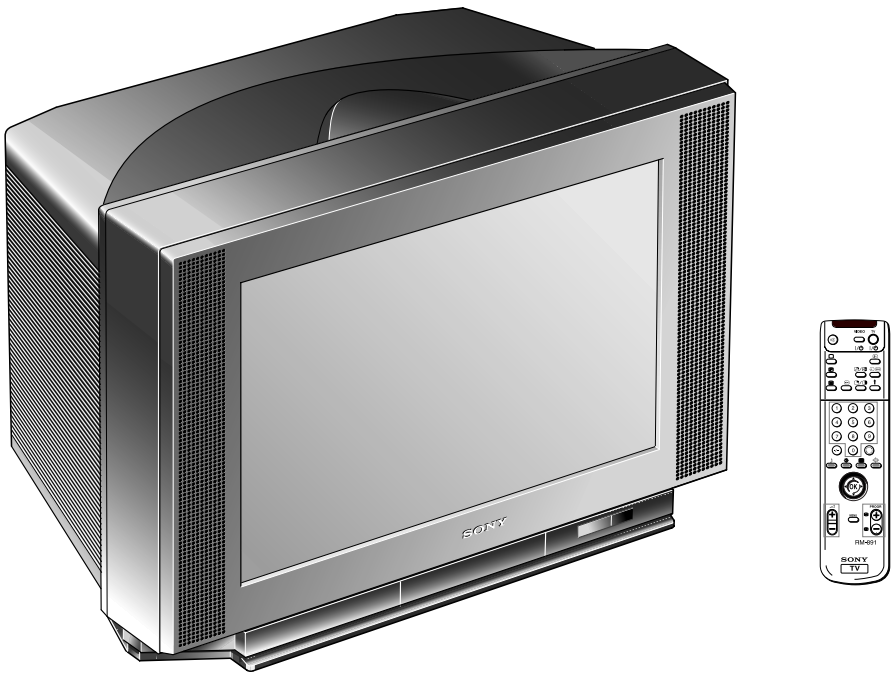

TRINITRON® COLOR TV

SONY®

MICROFILM

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
Italian	B/G/H	GERMAN Stereo	ITALIA VHF : A-H2 (C) UHF : 21-69 PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
French	B/G/H, D/K, L, I	GERMAN/NICAM Stereo	L VHF : F02-F10 UHF : F21-F60 CABLE : B-Q B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 I UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
AEP	B/G/H	GERMAN Stereo	PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish	B/G/H, D/K	GERMAN/NICAM Stereo	PAL B/G VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
OIRT	B/G/H, D/K	KV-25FX20K/29FX20K GERMAN/NICAM Stereo KV-25FX20R/29FX20R GERMAN Stereo	B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
UK	I	NICAM Stereo	UHF : B21-B69	PAL NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	25FX20A	25FX20B	25FX20D	25FX20E	25FX20K	25FX20R
Power Consumption	100W	100W	100W	100W	100W	100W

MODEL	29FX20A	29FX20B	29FX20D	29FX20E	29FX20K	29FX20R	29FX20U
Power Consumption	120W	120W	120W	120W	120W	120W	150W

[PICTURE TUBE]

KV-25FX20 — FD Trinitron
Approx. 63cm (25 inches)
(Approx. 59cm picture measured diagonally)
110 degree deflection

KV-29FX20 — FD Trinitron
Approx. 72cm (29 inches)
(Approx. 68cm picture measured diagonally)
110 degree deflection

Input/Output Terminals

[REAR]

1/ 21-pin Euro connector (CENELEC standard).
- Inputs for Audio and Video signals.
- Inputs for RGB.
- Outputs of TV Video and Audio signals.

2/S 21-pin Euro connector.
- inputs for Audio and Video signals.
- inputs for S Video.
- outputs for Audio and Video signals (selectable).

Phono Jack
- Outputs for Audio Signals

[FRONT]

3 Video input - phono jack

3 Audio inputs - phono jacks

3 S Video input - 4 pin din

Headphone jacks : stereo minijack

Sound output	2 x 14W (Music Power)
Subwoofer	30W (Music Power)
Power requirements	220 - 240V
Dimensions	
KV-25FX20	Approx 655x509x476mm (w/h/d)
KV-29FX20	Approx 746x569x516mm (w/h/d)
Weight	
KV-25FX20	Approx 37kg
KV-29FX20	Approx 47.5kg
Supplied accessories	RM-887 Remote Commander (1) IEC designated R6 battery (2)
Other features	NICAM*****, FASTEXT, TOPTEXT *****(KV-25FX20B/25FX20E/25FX20K/ KV-29FX20B/29FX20E/29FX20K/ KV-29FX20U only)

[RM-887]

Remote control system	Infrared control
Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Dimensions	Approx 44x209x23mm (w/h/d)
Weight	Approx 89g (Not including battery)

Design and specifications are subject to change without notice.

Model Name / Item	KV-25FX20A KV-29FX20A	KV-25FX20B KV-29FX20B	KV-25FX20D KV-29FX20D	KV-25FX20E KV-29FX20E	KV-25FX20K KV-29FX20K	KV-25FX20R KV-29FX20R	KV-29FX20U
Pal Comb	OFF	OFF	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RGB Priority	OFF	ON	ON	ON	OFF	OFF	OFF
Woofer Box	ON	ON	ON	ON	ON	ON	ON
Scart 1	ON	ON	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON	ON	ON
Norm B/G	ON	ON	ON	ON	ON	ON	OFF
Norm I	OFF	ON	OFF	OFF	OFF	OFF	ON
Norm D/K	OFF	ON	OFF	ON	ON	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Teletext	ON	ON	ON	ON	ON	ON	ON
Nicam Stereo	OFF	ON	OFF	ON	ON	OFF	ON
Language Preset	Italian	French	German	Spanish	OIRT	OIRT	English

WARNING (KV-29FX20U only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** capacity. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by **ASTA** to **BS 1362**, ie one that carries the ASTA mark.
IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE OUTLET SOCKET.
When an alternative type of plug is used it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

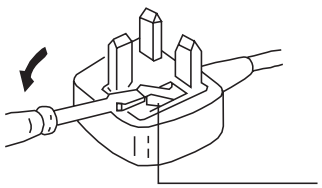

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

21 pin connector (1/ , 2 / S)

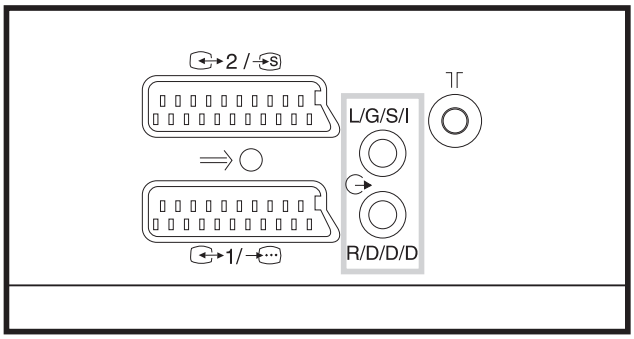

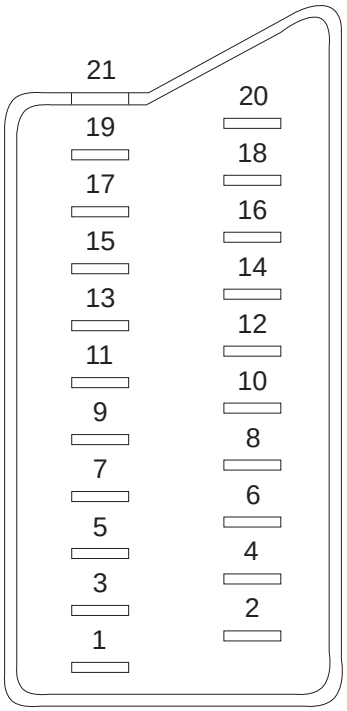

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	–	–	Red input	0.7 +/- 3dB, 75 ohms, positive
	–	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedence : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	–	–	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	–	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

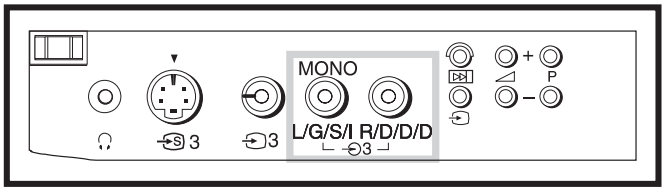

Pin No.	Signal	Signal Level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm, positive Sync. 0.3V -3 + 10dB
4	C (S signal) input	0.3V ± 3dB 75 ohm, positive Sync.

TABLE OF CONTENTS

Section	Title	Page
	Warning and Caution	3
	FE-1A Self Diagnostic Software	6
1. GENERAL		
	Overview of Remote Control Buttons	7
	Manually Tuning the TV	7
	Fine Tuning Channels	8
	Adjusting the Picture	8
	Adjusting the Sound	9
	Using the Sleep Timer	9
	Viewing Teletext	10
	Using Optional Equipment	10
	Troubleshooting	11
	Specifications	11
2. DISASSEMBLY		
2-1.	Rear Cover Removal	12
2-2.	Chassis Assy Removal	12
2-3.	Service Position	13
2-4.	H Board Removal	13
2-5.	S1 Board Removal	13
2-6.	Picture Tube Removal	14
2-7.	Removal and Replacement of the Main - Bracket bottom plates	15
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing	16
3-2.	Convergence	17
3-3.	Focus	19
3-4.	White Balance	19
4. CIRCUIT ADJUSTMENTS		
4-1.	Electrical Adjustments	20
4-2.	Test Mode 2	23
5. DIAGRAMS		
5-1.	Block Diagram (1)	25
	Block Diagram (2)	29
5-2.	Circuit Board Location	32
5-3.	Schematic Diagrams and Printed Wiring Boards	32
	* S1 Board	33
	* F Board	34
	* K Board	36
	* H Board	37
	* A Board	41
	* VM Board	46
	* C Board	50
5-4.	Semiconductors	51
5-5.	IC Blocks	53
6. EXPLODED VIEWS		
6-1.	Chassis	54
6-2.	Picture Tube	56
7. ELECTRICAL PARTS LIST		57

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE'LANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÈ LORS DE TOUT DÈPANNAGE. LE CHÁSSIS DE CE RÈCEPTEUR EST DIRECTMENT RACCORDÈ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SÈCURITÈ !!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES SCHÈMAS DE PRINCIPE, LES VUES EXPLOSÈES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÈ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPSANTS SONY DONT LE NUMÈRO DE PIÈCE EST INDIQUÈ DANS LE PRÈSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÈS PAR SONY.

FE-1A SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-1A chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See Table 1., non fatal errors are reported using this method.
Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1

ERROR	LED ERROR COUNT
No error	00
Not allowed (may be confused with Sircs response flash!)	01
Protection circuit trip < ANY TIME >	02
Reserved	03
No vertical sync	04
AKB	05
IIC bus clock and/or data lines low at Power ON	06
NVM no IIC bus acknowledge at Power ON	07
Jungle controller no IIC acknowledge at Power ON	08
Tuner no acknowledge at Power ON	09
Sound processor no acknowledge at Power ON	10

Flash Timing Example : e.g. error number 3

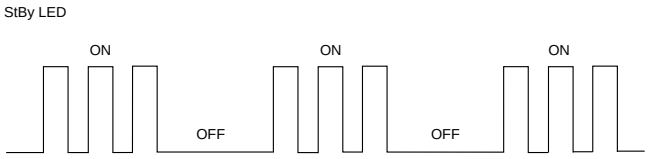

How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Standby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

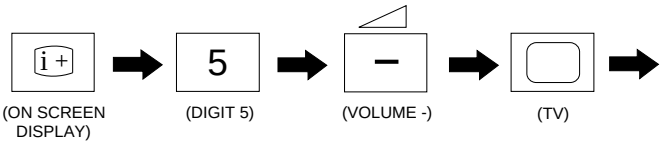

3. The following table will be displayed indicating the error count.

Table 2

Error	Times
2	-
3	-
4	-
5	-
6	-
7	-
8	-
9	-
10	-

Note: To clear the error count data press '80' on the Remote commander.